

SERVICE BULLETIN

SUBJECT:

Starting the Rotax 912 iS engine

AFFECTED PRODUCTS:

Legend aircrafts equipped with the injected Rotax 912 iS

COMPLIANCE:

MANDATORY

INSTRUCTIONS:

1. Apply the parking brake to the airplane.
2. Turn on the main switch.
3. Open the EMERGENCY flap and turn on the switch.
4. 2 red IGNITION FAILURE A and B lights will turn on.
5. Turn on the ignition switch and lock with the flaps.
6. Wait for the A and B lights to turn off.
7. Move the engine throttle lever slightly forward and start the engine with the start button.
8. Increase speed to 3,000 rpm. / min.
9. Turn off the EMRGENCY.
10. Heat the engine to operating temperature.