

SERVICE BULLETIN

SUBJECT:

Fuel tank switching on a fuel system without a hull fuselage tank

AFFECTED PRODUCTS:

Legend aircrafts without a hull fuselage tank

COMPLIANCE:

MANDATORY

INSTRUCTIONS:

Do not switch the fuel tap in the BOTH position while flying with the minimum fuel level. When slipping or slipping, there is a risk of fuel casting in one of the wing tanks and the pump sucks the air and the engine is temporarily stopped. If this happens, switch immediately to the tank where you have the fuel and switch on the backup pump.