



AEROPILOT Ltd.

LEGEND

RELEASE DATE: 20.09.2019

EFFECTIVE DATE: 20.09.2019

NOTICE ID: 1904

SERVICE BULLETIN NO. 1904

SUBJECT:

Starting the Rotax 912 iS engine

AFFECTED PRODUCTS:

Legend aircrafts equipped with an injected Rotax 912 iS engine

COMPLIANCE:

Mandatory

INSTRUCTIONS:

1. Apply the parking brake in the aircraft.
2. Turn on the main switch.
3. Open the Emergency flap and turn on the switch.
4. Two red ignition failure lights A and B will turn on.
5. Turn on the ignition switch and lock it with the flaps.
6. Wait for the lights A and B to turn off.
7. Move the engine throttle lever slightly forward and start the engine with the start button.
8. Increase speed to 3000 RPM/min.
9. Turn off the Emergency.
10. Warm the engine up to its operating temperature.